




## HOW TO USE THE WASHING-DRYER MACHINE



HVT1260SA

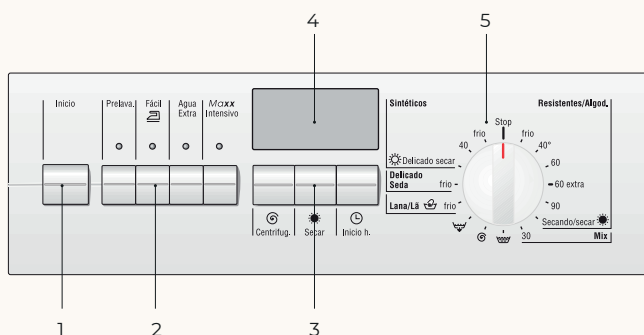

1. Start of washing/drying
2. Additional features
3. Prewash: Activate prewash - Easy: Gentler Spin - Extra Water: Additional rinse - Maxx Intensive: Wash more intense. Functions can be combined
4. Indicator panel
5. Spin
6. Dry
7. Start time key
8. Program selector knob

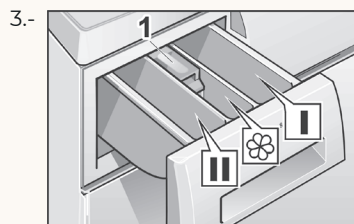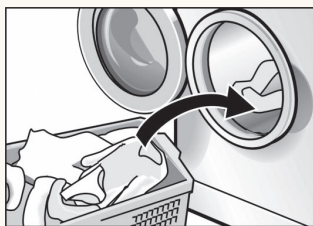

1. Open the door of the appliance.
2. Select program / switch on the appliance.  
**Note:** If the child lock has been activated, it must first be deactivated in order to select a programme.
3. Using the program selector to select the necessary program. The program selector can be turned in both directions.
4. Put the clothes in the container.
5. Dosage and filling of the tray with detergent and fabric softener. Remove the compartment for detergent.  
**Compartment I** Detergent for pre-treatment and laundry disinfectant.  
**Compartment II** Detergent for the main wash, descaler, bleach, stain remover.  
**Fabric softener compartment**, starch. Do not exceed the maximum load.
6. Slide the dispenser forward, fold it up and click it into place.
7. Start the program Press and hold the A Start/Pause + Load button for 1-2 seconds. Then release the button. The program starts and the appliance door is locked.

**Note:** When the program ends, it will show **END** (End) on the screen. The door is unlocked.