


HOW TO USE THE STOVE



BERTAZZONI

P302CERLAGN

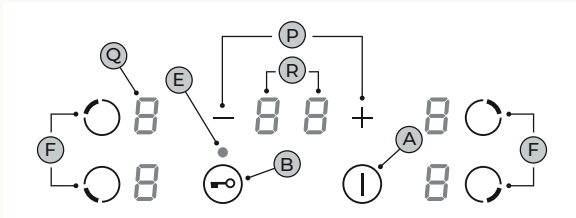

- A** On/Off button
- B** Key button
- E** On/Off button indicator light
- F** Cooking zone selection button
- G** Dual cooking zone on/off indicator light
- P** Buttons +/-
- Q** Cooking zone display
- R** Display timer

1. Timer

This function allows you to set a time (from 00 to 99 minutes) for automatic operation of the selected cooking zone. Once the set time has elapsed, the cooking zone switches off.

Note: depending on the version that you have, the unit could perform an auto setup by emitting sound signals and activating all LEDs and Displays for a several seconds upon initial connection to the power supply. Do not operate any buttons or activate any functions during this time.

- Depending on the model you have, the cooktop may be in safe mode when you initially switch on the appliance; i.e. "key button indicator light" (E) on. To use the cooktop, you need to press and hold sensor B for about 2 seconds until it switches off.
- The device can be switched on by simply operating the ON/OFF button A. A "0" appears on all cooking zone displays for 10 seconds. If no operation is carried out within 10 seconds, the hob switches off.

- Once this operation has been carried out, select the cooking zone F, press and hold down for at least 2 seconds, and adjust the temperature with "+" or "-" buttons from 1 to 9-P. The active cooking zone will have a brighter display than the others.
- If you want to switch from "P" (booster) to "0" push the "-" button.
- The hotplate can be switched off using the "F" button or by setting the power level to "0" using sensor "P", after 10 seconds the cooking zone switches off. During the 10 seconds it is possible to reset the various cooking levels to ON.
- The hob can be turned off by operating the main start sensor A. If all plates are set to "0", the hob switches after 10 seconds.
- In case the cooktop is equipped with plates having extensions, the second zone will be switched on after having verified that:
 1. The indicator LED of button B is on, otherwise switch it off.
 2. Press button A to turn on the hob.
 3. Select the desired zone and adjust the power with the "+" or "-" buttons.
 4. Once the power has been adjusted, briefly press the button again to activate the two zones. When the extended zone is active the led "G" lights up.
 5. To deactivate the dual mode, press the button again. A beep will accompany each activation/deactivation of the dual zone.
- If an object is positioned above the controls, the hob will automatically move to the OFF position within 5-10 seconds by emitting acoustic signals.
- When you switch a plate to the OFF position and the temperature of the glass surface is still in excess of about 50°, an "H" light signal will be shown on the display of the respective cooking zone.
- Function B blocks the operation of the hob upon selection E.g. if you activate the function while the cooktop has two zones turned on, the system remains locked even if you try to turn another zone on. The same thing happens if the appliance is switched off and you activate the function the cooktop will not be switched on.
- To activate or deactivate it, hold your finger on sensor B for about two seconds. The function is active when LED indicator E is on. Even with the button enabled, the A button turns off all active zones and the F button turns off only a specific zone.