 
 


HOW TO USE THE DRYER

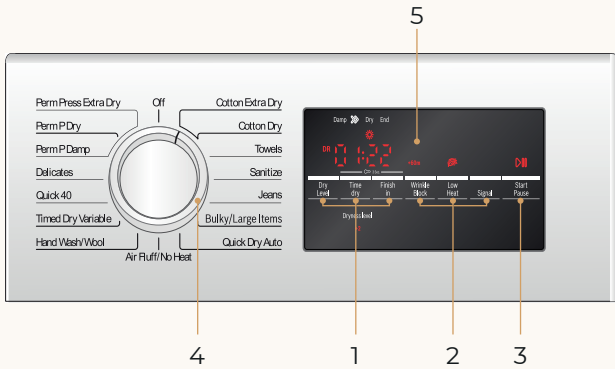

- 1.- Dry Level, Time dry, Finish in
 - Selectable Option Settings for customizing Pro-grams as desired.
 - Indicator Symbol lights or desired time is displayed if setting is active.
- 2.- Wrinkle Block™, Low Heat, Signal
 - Additional option settings.Indicator Symbol lights if setting is active.
- 3.- Start/Pause
 - Starts or pauses the selected cycle
 - Indicator lamp on (steady) - cycle running, can be paused
 - Indicator lamp blinking - options can be changed; cycle can be started; door is closed; cycle is in Pause mode.
- 4.- Program Selector
 - Selecting a program and switching on/off turns in both directions.
- 5.- Display area for settings and information.

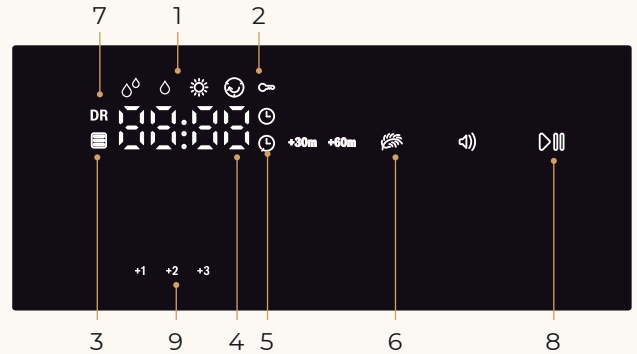

1. Drying cycle status sequence
2. Childproof lock indicator
3. Cleaning required indicator
4. Digit Display:
5. Finish in time adjustable in 1h (h=hour).
6. Time Dry and Finish in 0 indicators
7. Indicator lamps for additional option settings: Wrinkle Block™, Low Heat and Signal
8. Check drain indicator Start/Pause indicator
9. Dry Level indicator

 
 
Program selection

- 1.- For optimum drying results your dryer offers several different types of programs to choose from. Select the required drying program.


Automatic programs

- There are automatic programs for different types of textiles (regular/cotton, permanent press).
- The program sequence of automatic programs is controlled by sensors. The duration of the program depends on the measured degree of moisture in the laundry and on the selected degree of dryness (e.g. Cotton Dry or Cotton Extra Dry).

Regular / Cotton

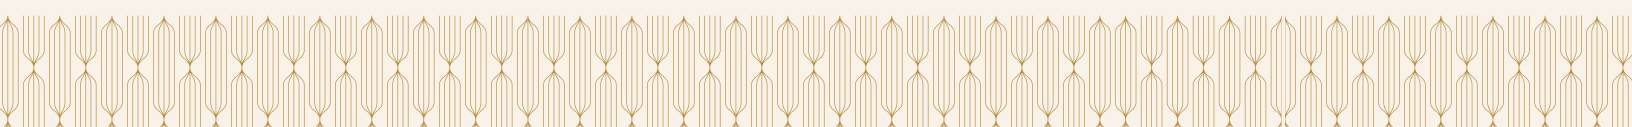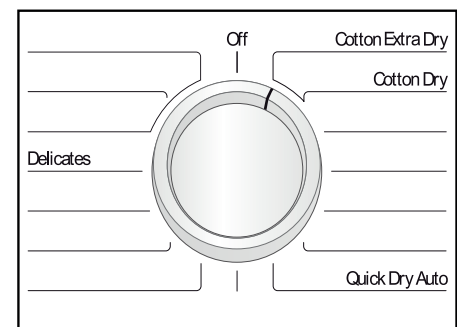


Permanent Press

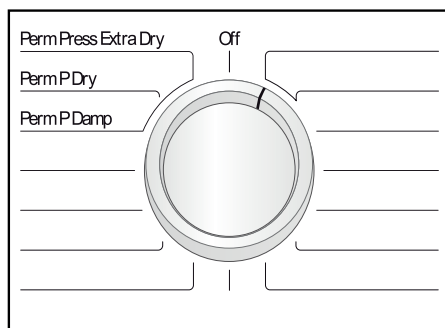 



Special programs

 - The programs Sanitize, Jeans, Anti Shrink, Super Quick 15™, Towels, Bulky/Large Items and Heavy Duty (depending on model) are made for special type fabric loads.

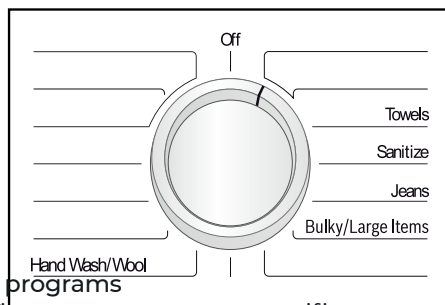

Time programs

  - Time programs run at specific temperatures and are suitable for delicate items, individual or a few small items and subsequent drying.

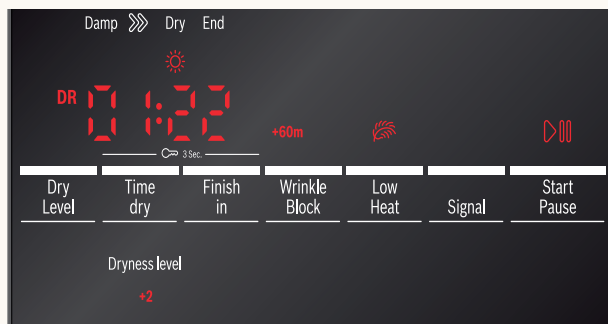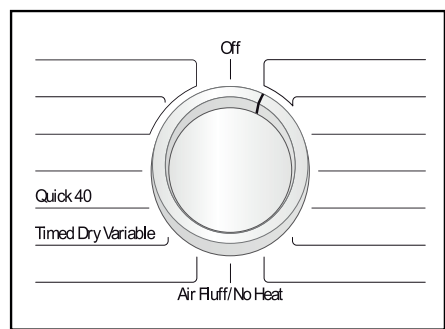


Selecting program settings and additional options

- By selecting program settings and additional options, you can adjust the drying process to better suit the items you are drying. The settings can be selected and deselected depending on the cycle progress.
- The indicator lamps of the buttons light up if the setting is active.
- For Time dry, Finish in, Wrinkle Block™, Low Heat and Signal the settings are not retained after the appliance is switched off.
- For Dry Level the setting is retained after the appliance is switched off.

Loading the laundry

WARNING RISK OF EXPLOSION
Do not dry laundry that has ever been in contact with solvents, oil, wax, grease or paint (e.g. hair styling products, nail varnish remover, stain remover, cleaning solvent, etc.).

 1. Check lint filter.

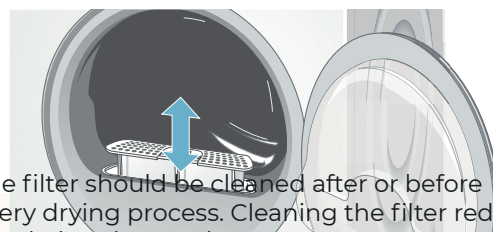

The filter should be cleaned after or before every drying process. Cleaning the filter reduces the drying time and saves energy.

2. Load the laundry into the drum and close the door.

 
Tip: If the door has not been closed properly, the dryer will not start.




Tips

- After loading, close the door carefully so as not to trap any items between the door and the rubber seal. The door should close until a click is heard.
- Foreign objects left in the drum may damage laundry. Before inserting any laundry, check to make sure no foreign objects are in the drum.
- Recommended maximum load size.

3. Load the laundry

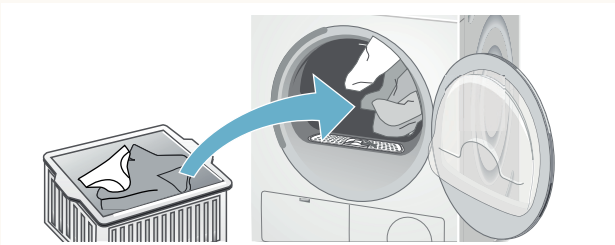

 - Place laundry in the empty drum. Put each piece of laundry into machine separately.
- For best results the laundry to be dried must be sorted according to type of laundry and desired degree of drying.
- Rotate program selector to the desired program. Select the program which corresponds to the laundry in the dryer.

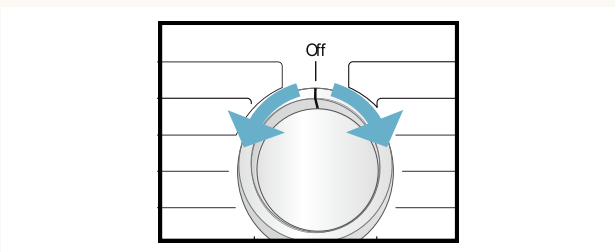


1. The Start/Pause indicator light starts flashing.
2. Touch the Start/Pause button. Indicator lamp lights up and the cycle starts.



1. During the cycle, the display area indicates the estimated remaining time and symbols showing the cycle progress are lit.

Indicator of program sequence

 Bosch® dryers use an advanced control system which continually monitors the laundry's remaining moisture. The current state of the process and status of the program is shown by indicator lights (Damp, =, Dry, End).

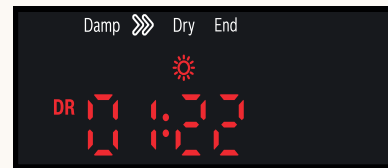

Selecting a different program

If you have inadvertently started the wrong program, you can change this as follows:

1. Touch Start/Pause.
2. Select another program.
3. Touch Start/Pause.

 
The new drying cycle starts from the beginning.

Cancel program

If required, you can cancel the selected program:

1. Touch Start/Pause
2. Rotate the program selector to Off.

Program end

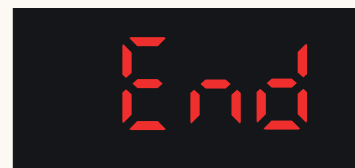

End appears in the display area and the Start/Pause button indicator lamp is off. After the program end, rotate the program selector to Off.