


HOW TO USE THE WASHING-DRYER MACHINE

mabe
LSM1100XSO

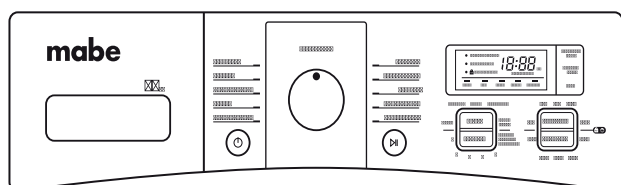

Wash

1. Put the load of laundry in the drum, pour the detergent and fabric softener into the detergent compartment. Close the door.
2. Press the power button. The indicator light only shows the signal - --.
3. Press the WASH button to select the DESIRED WASH cycle. The NORMAL program is selected automatically.
4. Press the START/PAUSE button. The washing machine will work with the door locked and water supply.

Rinse

1. Put the load of laundry in the drum, pour the detergent and fabric softener into the detergent compartment. Close the door.
2. Press the power button. The indicator light only shows the signal - --.
3. Press the RINSE button to select the desired rinse time. The NORMAL program is selected automatically.

Dry

1. Put the load of laundry in the drum and close the door.
2. Press the power button. The indicator light only shows the signal - --.
3. Press the SPIN button to select the SPIN LEVEL wanted. The NORMAL program is selected automatically. The water temperature adjusts automatically.

Notes:

- Do not use detergent or fabric softener.
- Check that the cold water tap is open.
- After the program is finished, it appears alternately on the printed circuit board. To prevent wrinkling, the program runs for 30 minutes and then the washing machine switches off.
- In the SYNTHETIC, DELICATE and WOOL WASHABLE programmes, DRY cannot be selected.
- When removing the clothes, take into account the high temperature of the clothes.
- Drying may cause the clothes to shrink and become slightly misshapen, so please check whether or not the clothes are suitable for use in advance.
- If drying is not satisfactory, change the selected temperature.
- If you want to wash and dry, first select the program, then press the DRY button and then the START/PAUSE button.