 
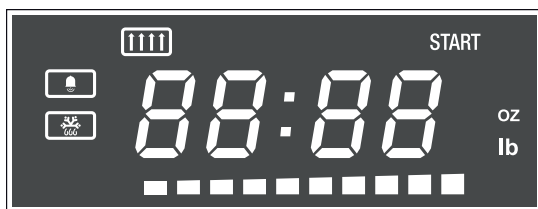 
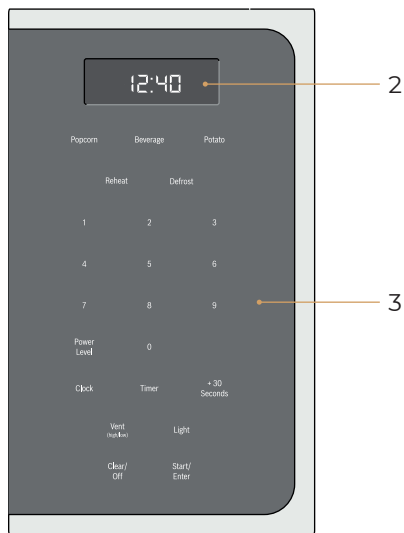 


## HOW TO USE THE MICROWAVE

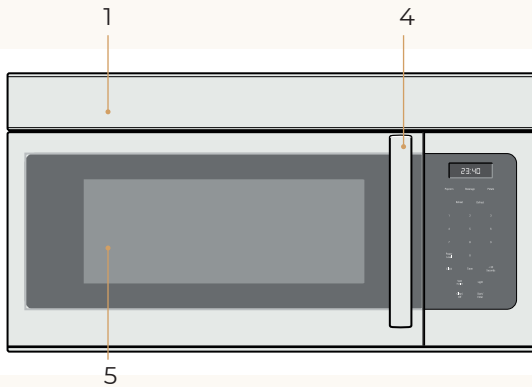

1. Top vent grill
2. Display
3. Control panel
4. Door handle
5. Window

### Touch keys

You can activate a function by briefly touching the corresponding touch key. Each time you touch a key a short beep will sound. A long beep will tell you that you have made an invalid input.

### Display elements

The display gives you information on the current settings of your appliance. Blinking display symbols indicate that an input is required.

### Operating the microwave

1. Enter the desired cooking duration with the number keys, for example: To set a microwave cooking time of 2 minutes and 30 seconds, enter the numbers 2 3 0. START will begin blinking.
2. You can start microwave operation with the default power level 10 by touching Start/Enter or you can adjust the power level. To make adjustments, touch Power Level and the default power level should begin blinking. Adjust the level as necessary.
3. Press START.