 
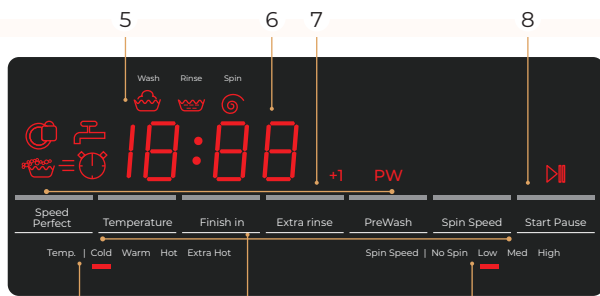 



HOW TO USE THE WASHING MACHINE

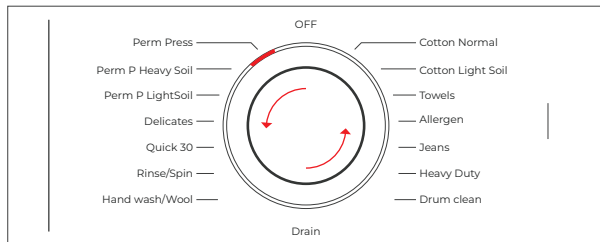

1. Program Selector
2. Selectable temperature ranges
3. Temperature Finish in, Spin Speed
4. Selectable Spin Ranges
5. Cycle status sequence
6. 4 Digit Display
7. SpeedPerfect® Prewash^{PW} Extra Rinse^{+1, +2}
8. Start/Pause

Starting the cycle

 1. Open the detergent dispenser tray.
2. Add detergent or additive.
3. Avoid overfilling the compartment to prevent early dispensing.
4. Close the detergent dispenser tray completely before starting the wash cycle.

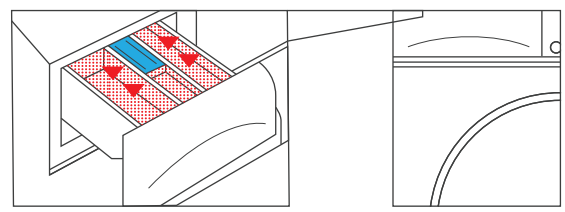

Tip: DO NOT operate the washer without the detergent compartment in place and fully closed.

1. Touch the Start/Pause button. Indicator lamp lights up and the cycles starts.
2. NOTICE: If you want to protect the cycle against inadvertent adjustment, select the child lock.
3. During the cycle, the display field indicates the "Finish at" time and, after starting the washing cycle, the cycle duration and the symbols for the cycle progress.

Pausing/Adding a garment to the cycle

Pausing the wash cycle can be useful for several purposes. Touch Start/Pause. A appears on the display. Wash load will soak in water until continued by touching Start/Pause.

For adding a garment after the cycle begins .

1. Touch Start/Pause.
2. Open door carefully and add or remove laundry item. Note: You can do this as long as the Start/Pause indicator flashes and it is safe to do so.
3. Close door.
4. Touch Start/Pause. The cycle continues.

NOTICE: If the cycle is paused but the door will not unlock it could be for safety reasons (high water level, water temperature or drum speed).

Cancel cycle

For cycles with a high temperature:

1. Touch Start/Pause.
2. Cool the laundry off: Select Rinse.
3. Touch Start/Pause.

For cycles with a low temperature:

1. Touch Start/Pause.
2. Select Drain.
3. Touch Start/Pause.

Cycle end

End appears in the display field and the Start/Pause button indicator lamp is off. If this symbol appears in the display, the washer has detected too much foam and it automatically adds an additional rinse to remove the foam.

NOTICE: Use less detergent the next time you run the washer with the same load.