


HOW TO USE THE STOVE



PKN675N14R

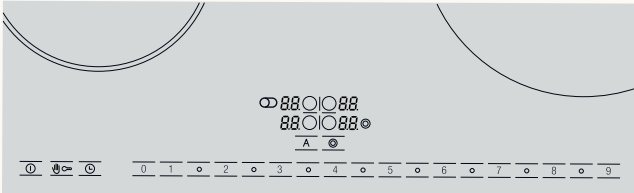

- A Electronic system for quick start cooking
- ⊙ Electronic system for quick start cooking
- 1-9 Indicators for Cooking Position
- H/h Residual Heat
- Cooking Zone
- ⊙ Main Switch
- 👉 Protection for Cleaning / Child Lock
- ⊙ Timer

This chapter provides information on how to program the cooking zones. The table specifies the positions and times for cooking different dishes.

- Turn the hob on and off: The hob is turned on and off with the main switch. Switch On: Press the symbol, a signal sounds. The main switch indicator and the cooking zone indicators light up. The hob is ready for use.
- Turn off: Press the symbol until the indicator located above the main switch and the cooking zone indicators turn off. All cooking zones are off. The residual heat indicator will continue to light up until the cooking zones have cooled down sufficiently.

Note: The hob automatically disconnects when all the cooking zones remain off for more than 15 seconds.

Programming the cooking zone

The desired cooking position is set from the programming area.

- Cooking position 1 = lowest power
- Cooking position 9 = highest power

Each cooking position has an intermediate position. This position is marked with the symbol in the programming area.

Adjust cooking position

1. Touch the symbol to select the cooking zone. The symbol for selecting the cooking zones is displayed and lights up on the cooking position display.
2. Program the desired cooking position in the programming area.

