


## HOW TO USE THE STOVE

# TEKA

TT 6420

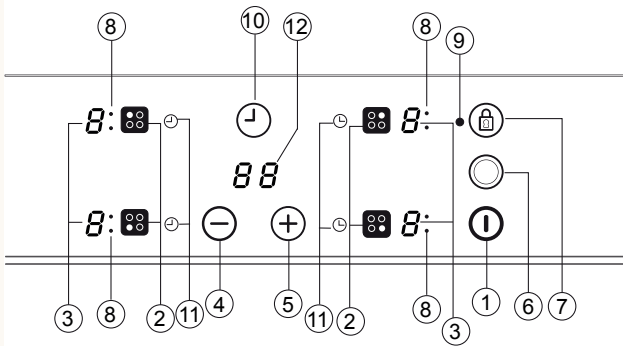

- 1 On/Off sensor.
- 2 Burner indicators.
- 3 Power and/or residual heat indicators\*.
- 4 "Minus" sensor for power reduction.
- 5 "Plus" sensor for increasing power.
- 6 Double circuit selection sensor (double burner).
- 7 Sensor blocking the rest of the sensors.
- 8 Dual heat plate area indicator (only next to hot plates with double burner)\*.
- 9 Lock icon\*.
- 10 Timer touch key.
- 11 \*Time setting icon of the hot plate.
- 12 \*Timer display

**\*\* Settings are visible only in operation.**  
Changes to the settings are performed by tapping the sensors. You do not need to exert force on the glass or the desired sensor. Simply by touching it with your fingertip, it will activate the desired function.

### Switch on the device

When you connect the burner for the first time, it will be locked and the corresponding indicator light will be on (9).

To unlock it, you must first touch the lock sensor (7) until the light (9) goes off.

1. Touch the ignition sensor (1) for at least one second. Touch control is activated and a 0 appears at 50% brightness on all power displays (3).

If any area has residual heat before the On, the display continues to show "H" instead of 0. The next maneuver must be carried out within 10 seconds, otherwise the touch control will turn off automatically.